FIREPLACE OPERATION

The unit has no main power switch. (Caution: If servicing this unit, turn off power at the main circuit breaker or unplug the unit.)



Press the On/Off button once to turn the unit on. Press the On/Off button a second time to turn the unit off.



Press the Heater button to turn the heater to low. Press the Heater button a second time to turn the heater to high. Pressing the Heater button a third time turns the heater off.



To set the digital thermostat, touch the temperature down thermometer to lower the temperature set point. Press the temperature up thermometer to raise the temperature set point. The set point will be indicated on the digital display.



Press the Color Mode button to toggle the unit through the available colors. Colors are also indicated by the numerical reference in the digital display.



Press the Dimmer button to dim the fire image. Pressing the Dimmer button

Long press (3 seconds) the On/Off button once to turn the unit on. Long press the On/Off button a second time to turn the unit off.

Press the Heater button to turn the heater to low. Press the heater button a second time to turn the heater to high. Pressing the Heater button a third time turns the heater off.

To set the digital thermostat, touch the Down button to lower the temperature set point. Press the Up button to raise the temperature set point. The set point will be indicated on the digital display.

Long press (3 seconds) the Color Mode button to color change. Now quick press to toggle the unit through the available colors. Colors are also indicated by the numerical reference in the digital display.

Press the Dimmer button to dim the fire image. Pressing the Dimmer button multiple times will cycle through the available brightness settings.

